


MOTOREN DESMEDT NV

Moerelei 145, B-2610 Antwerpen, Belgium
Tel. +32(0)3830.09.90 Fax. +32(0)3828.78.90
info@motorendesmedt.be www.motorendesmedt.be

Wiring diagram - 6pin Terminal Box

Single-Phase Motors 7JB - Permanent Capacitor

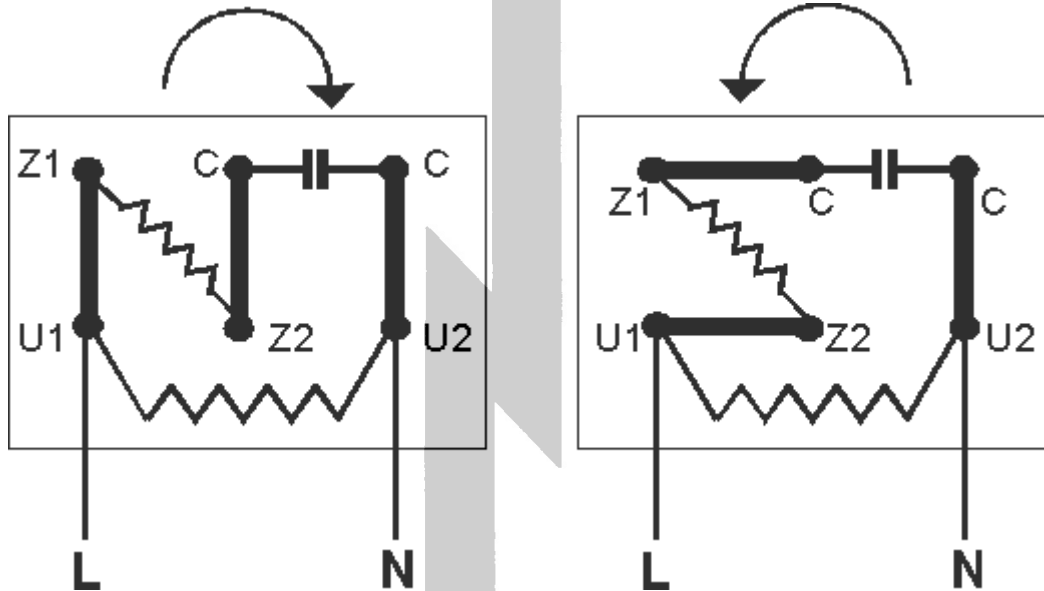


To change direction of rotation simply re-position the 3 metal links in the terminal box.

In order to use a change-over switch it is necessary to reconnect the internal termination on the terminal block in the following way:

The re-connection must be carried out by a qualified electrician !

We cannot be held responsible for any damages caused by incorrect wiring.

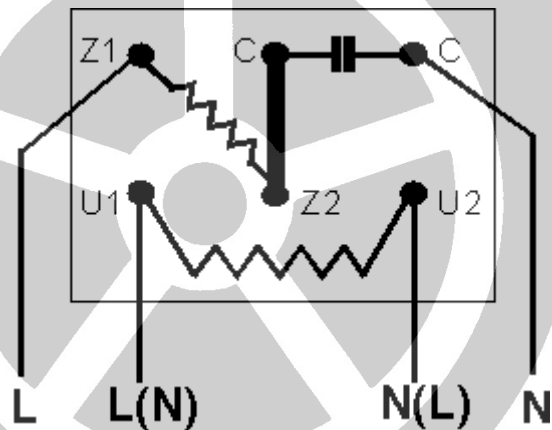

Supply **L** to **Z1** at all times.
Supply **N** to **C** (top right-hand) at all times.

Swap **L** and **N** to **U1** and **U2** to change direction of rotation.


IMPORTANT ! Always check the motor nameplate for correct **voltage** and the inside of the terminal box lid for the correct wiring diagram.
Ask if in doubt ! Incorrect wiring will damage the motor and invalidate the Warranty!

MOTOREN DESMEDT NV

Moerelei 145, B-2610 Antwerpen, Belgium
Tel. +32(0)3830.09.90 Fax. +32(0)3828.78.90
info@motorendesmedt.be www.motorendesmedt.be


Wiring diagram - 6pin Terminal Box

Single-Phase Motors 7JE - Capacitor Start-Capacitor Run

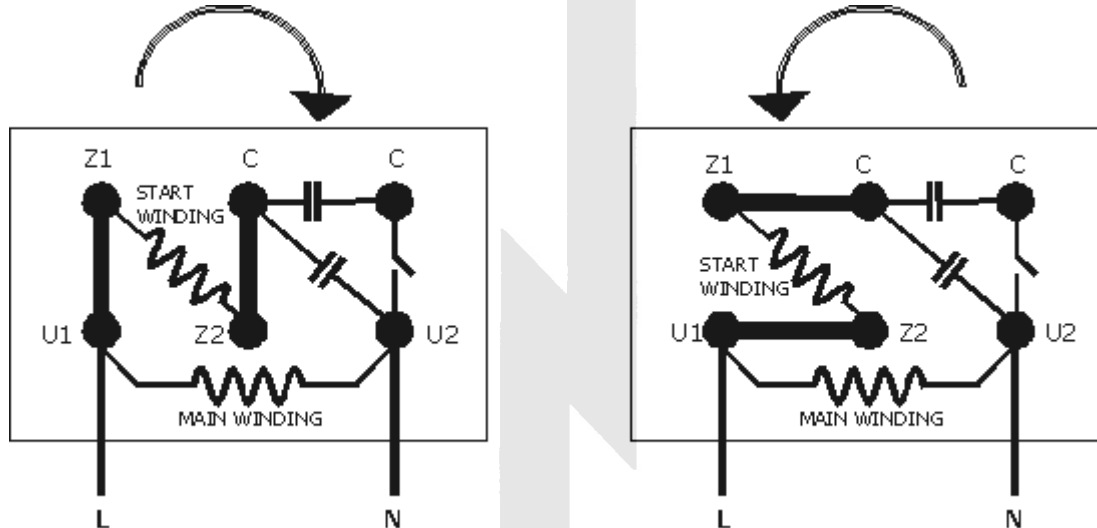

To change direction of rotation simply re-position the 2 metal links in the terminal box.

In order to use a change-over switch it is necessary to reconnect the internal termination on the terminal block in the following way: **The re-connection must be carried out by a qualified electrician !** We cannot be held responsible for any damages caused by incorrect wiring.

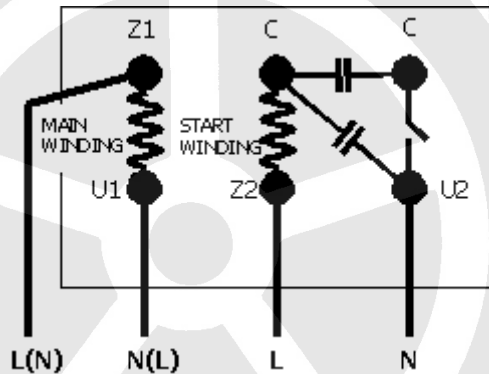

IMPORTANT !

Always check the motor nameplate for correct **voltage** and the inside of the terminal box lid for the correct wiring diagram.

Ask if in doubt !

Incorrect wiring will damage the motor and invalidate the Warranty!

1. Disconnect **Start Winding** cable from **Z1** and connect it to **C** (on the left)
2. Disconnect **Main Winding** cable from **U2** and connect it to **Z1**

Supply **L** to **Z2** at all times.
Supply **N** to **U2** at all times.
Swap **L** and **N** to **Z1** and **U1** to change direction of rotation.